

Connecting the EZClear 16 watt UV to the BioSteps Filter.


The Matala 16 watt EZClear UV comes with the necessary components to connect it to a BioSteps Filter.

The small Accessory Bag has a Nut and Gasket. Use this Nut and Gasket to connect the UV to The BioSteps filter tank body.

Nut and Gasket Accessories .



Inlet Fitting Bag

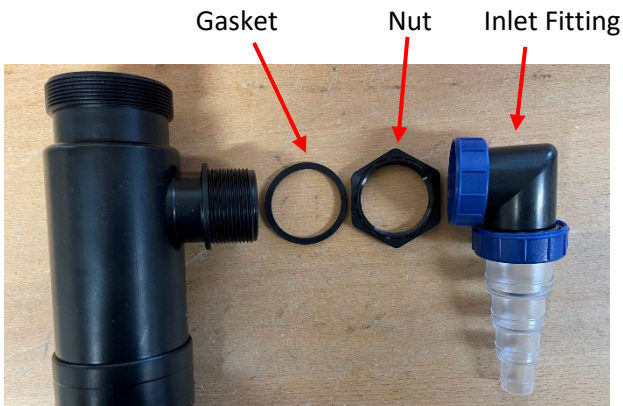

First slide the Gasket onto the threads of UV.



Then insert the threads of UV through the inlet opening of BioSteps filter tank.
The Gasket should be on the inside of the filter tank.



Tighten the Nut onto the threads of the UV.
The Nut should be on the outside of the filter tank.
Tighten Nut securely to prevent water leaks.

Screw the blue Inlet Fitting Nut with O-Ring onto the UV
threads tightly.

